

Features:

- 1. Two-stage design for coarse grinding, and fine honing.
- 2. High quality components guarantee long time usage and great user experience.
- 3. Powerful anti-slip suction base ensures the safety during use.



"1" slot:

Coarse grinding designed to sharpen the dull



"2" slot:

Used to polish the blade, usually in the second

Instruction:

1. Place the Sharpener onto a smooth surface and turn clockwise, following the lock marking to engage the compression mechanism inside the machine. Turn Anti clockwise, following the unlock marking, to release





2. According to the bluntness of your knife, do as the following step one or step two:

Step one: Coarse grinding for dull knives. Place the knife in the "1" slot. Pull the blade (one-direction) with slight downward pressure. When sharpening knife, keep it vertical with a light intensity. According to the sharpness, repeat 3-8 times. Do not push and pull your knife back and forth.

Step two: Fine honing. Always finish the sharpening process with this step to make the blade smooth and bright. Place the knife in slot "2" and use the same method as step one.

3. Clean the knife with water or wet cloth, then dry it.

Attention:

- 1.This sharpener is suitable for household kitchen knives.
- 2.This sharpener is not suitable for serrated knife, scissors, ceramic knives, or collectible knives.
- 3.Do not put the sharpener into the dishwasher and keep it away from your children
- 4. It is normal for the the ceramic and metal sharpening slots to turn black.
- 5. When sharpening a knife, do not use too much force, as this can cause the blade edge to crack or can create gaps.
- 6.Use a soft brush to clean the grinder of the sharpening machine and keep the grinding head clean.


7. For best performance, clean the knife blade before and after each

grinding process.

8. Please note, only pull the blade one way. Do not push back

and forth when sharpening.

9. If there is any gap or crack on knife, please don't use this item to sharpen in order to prevent from further damage.

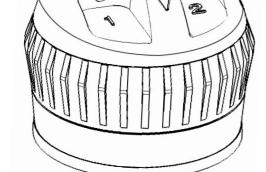

KITCHEN KNIFE SHARPENER

INSTRUCTION MANUAL