

IMPORTANT SAFETY INSTRUCTIONS

1. Read all the instructions and keep for reference.
2. Should the appliance be passed onto third parties, so must this instruction manual.
3. This product is not intended for medical use. It is intended solely for massages.
4. Consult your physician before using this product if:
 - a. You are pregnant
 - b. You have been fitted with a pacemaker, an implant, or other medical aid
 - c. You suffer from diabetes
 - d. You have a circulatory disorder
 - e. You have any concerns about your health
5. Older or infirm persons should consult their doctor before using the product, even if they have no specific pre-existing conditions.
6. Friction burns can be painful; do not use the appliance directly on the skin.
7. Cease use immediately if you feel discomfort or pain.
8. Do not use this product immediately prior to going to bed. The massager has a stimulating effect, and can delay sleep.
9. To avoid a short circuit, connect the device correctly and keep it away from metal (pins), rubbish and water.
10. Use the device on a level surface. If the device is not stable, it can tip over and cause injury.
11. Remove the adapter from the power outlet when not in use.
12. If you suspect a problem, turn off the device straight away.
13. Store the device in its packaging for prolonged storage, or in a secure, dry and cool place.
14. Do not place any other objects on the massager.
15. If the power cord is damaged, it must be replaced; this should only be done by an authorized or qualified person.
16. To avoid the risk of electric shock, do not use the device on wet skin.
17. Keep the product away from moisture. Do not use if the appliance or parts of it are wet or damp.
18. The device may be used by children from 8 years of age, or by persons with reduced physical, sensory mental capabilities or lack of experience and/or knowledge, only if they have been supervised or instructed in the safe use of the device and have understood the hazards arising therefrom. Children should not play with the appliance. Cleaning and user maintenance must not be performed by children unless they are over 8 years old and supervised. Children younger than 8 years of age are to be kept away from the machine and the connecting cable.
19. To avoid injury and irreparable damage, always sit while using the massager. In order to avoid serious injury, never stand on the unit or use it with excessive force.
20. Do not attempt to disassemble or repair the appliance. Repairs may only be carried out by a suitable qualified technician.

DISPOSAL

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of paper and cardboard packaging separately from plastic bags into the corresponding containers
- Dispose of the product at the end of its lifespan at your local authorised household waste recycling centre

EasyLife Ltd, London, NW1 0JP
Support Line: 0333 030 0777
© EasyLife Ltd. 2021 (Reg. No. 05221840)
For more innovative products, please visit
www.easylife.co.uk

IN2620 © 2021 EasyLife Ltd

Vibrolegs

INSTRUCTION MANUAL

Get active,
stay active -
painlessly
and
effortlessly



Model No. EL2620

Please read carefully before use and keep for future reference

Dear Customer

Thank you for purchasing the Vibrolegs.

START-UP AND USE

The device is designed for use on the arches of the feet, on the legs, and on the back. Do not use upon the waist, neck or other parts of the body not described in this manual. Do not use the device for any purposes other than those specified in this manual.

1. Plug the power adapter into the power outlet and connect the cable to the unit. As soon as the device is connected to power, it will beep once and the display will light up.
2. Once the device is connected, turn it so that the display faces forward. Select a mode according to your requirements using the remote control or the buttons on the device. Your settings will be shown on the display. To start, press the Start/Stop button on remote control or on the device.
3. To switch off Vibrolegs correctly, you must first stop the device by pressing the Start/stop button on the device or on the remote control. Then press the power button on the device to switch off the device completely.
4. Disconnect the appliance from the power outlet after use.

ATTENTION: For sensitive floor surfaces (eg.parquet) we recommend placing a film mat or carpet under the unit This prevent damage to and discolouration of your flooring.

CORRECT POSITIONS FOR USE (Picture 1)

Place the arch of the foot or calf on the appliance. For use on the back,you can place your back on or lean against it.

NOTE: Never put your full body weight on the appliance, as this could damage the device.



OPERATION PANEL AND REMOTE CONTROL BUTTONS

Power button: Press this button on device to turn the unit ON or OFF.

Start/Stop: Press this button to start with your chosen settings when the device is in operation, press this button to stop it.

Time-: Reduce the time. The pre-set time is 15 minutes, press this button to reduce the time.

Time+: Increase the time. Press this button to increase the time. The maximum adjustable time is 30minutes.

Speed+: Increase the speed. The speed can be manually set from 1 to 10. Press this button to increase the speed while the device is running.

Speed-: Reduce the speed. The speed can be manually set from 1 to 10. Press this button to reduce the speed while the device is running.

Program Button: You could change programs between manual mode and automatic mode via this button. By pressing repeatedly, you can switch between the programs, HO, UI, P1, P2 and P3. When you press Program button on time, "UI" appears on the display. In this mode, with oscillation function only and customizable speed. In the P1 program, the oscillation and massage function are active, and the device runs through a program with pre-set speed range. You can not change the speed in this program. In the P2 program, the device will switch between oscillation and massage with the pre-set time and speed range. In the program P3, the acupressure heads are deactivated and only the oscillation is activated, with the pre-set speed range.

Manual mode: "HO": In standby mode, when you press "Start/stop" button, the device will in manual mode, "HO" appears on the display, in this mode, the oscillation and massage functions run continuously, the speed is customizable. In standby mode, you can adjust the time but not the speed. Once the device has been put into operation, you can adjust the speed but not the time.

Note: By pressing the P button on the device multiple times, you can also switch to manual mode "HO".

Important notes on operation:

You can select the P mode (Auto Program) after switching on the device; press Start/stop to activate the appliance. Stop the appliance by first pressing Start/stop. Then switch off the device with the power button or press Start/stop again to continue the massage.

In manual mode "HO", you can set the time before the massage starts and adjust the speed during the massage.

Note: In program P3, the rotating acupressure heads will stop as soon as you place your feet on the device. This is no defect.



Table : Program overview of P1, P2, P3 and manual mode:

AUTOMATIC PROGRAM P1	
FUNCTION	SPEED RANGE (CHANGES PER MINUTE)
Oscillation and Acupressure	1-2-3-4-5-6-7-8-5-3-1-3-5-8-3

AUTOMATIC PROGRAM P2		
STANDARD TIME 15 MINUTES TOTAL	FUNCTION	SPEED LEVEL
1 st minute	Oscillation & acupressure	1 level
2 nd minute	Oscillation only	3 level
3rd minute	Oscillation & acupressure	5 level
4th minute	Oscillation only	7 level
5th minute	Oscillation & acupressure	9 level
6th minute	Oscillation only	10 level
7th minute	Oscillation & acupressure	8 level
8th minute	Oscillation only	6 level
9th minute	Oscillation & acupressure	4 level
10th minute	Oscillation only	2 level
11th minute	Oscillation & acupressure	1 level
12 th minute	Oscillation only	4 level
13th minute	Oscillation & acupressure	8 level
14th minute	Oscillation only	6 level
15th minute	Oscillation & acupressure	4 level

AUTOMATIC PROGRAM P3	
FUNCTION	SPEED RANGE (CHANGES PER MINUTE)
Oscillation only	3-5-7-9-2-4-6-8-10-1-5-10-5-1-5

Manual Mode "HO" - Oscillation & acupressure	
Oscillation & Acupressure	Speed is customizable

Manual Mode "UI"-Oscillation only	
Oscillation only	Speed is customizable

Switching off the Vibrolegs

Switch off VibroLegs correctly, you must first stop the device by pressing the stop button on the device or on remote control. Then press the power button to switch off the device completely.

CLEANING

Always disconnect the plug from the mains before cleaning!

Clean the device and the silicone pads with a damp cloth and mild detergent. Do not use abrasive or corrosive cleaning agents. The silicone pads can be removed to make cleaning easier.

Never allow the appliance to come into contact with water or other liquids.