

DISPOSAL

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of paper and cardboard packaging separately from plastic bags into the corresponding containers.
- Dispose of the appliance at the end of its life span according to environmental considerations.

TECHNICAL SPECIFICATION

Measurement: 14.8 x13x8.5cm

Input: 12V DC 12.5A Max

Power: 150W Max

Plug: 12V fused at 20A

Cable length: 1.9M

Car Heater INSTRUCTION MANUAL



Model No: 2778 (XF-5007)

Please read carefully before use and keep for future reference

EasyLife Ltd, London, NW1 0JP

Support Line: 0333 030 0777

© EasyLife Ltd. 2021 (Reg. No. 05221840)

For more innovative products, please visit

www.easylife.co.uk

IN2778 © 2021 EasyLife Ltd.



Dear Customer

Thank you for purchasing Car Heater.


Please read instructions before use. Retain for future use.

WARNING:

1. This appliance must not be covered.
2. Use as intended only.
3. Use only 20A 5 x 20mm glass fuse as replacement.
4. This product is not a toy. Do not allow children to play with or near this item.
5. Do not use directly on a frozen windscreen.
6. Do not block airway and openings of heater.
7. Do not use near combustible materials.
8. Do not leave unattended.
9. Use ONLY when the engine is running. Prolonged use MAY discharge the battery.
10. Do not use if the product or its supply cable are damaged and inspect the product regularly.
11. Do not use if there is moisture on the cord, plug, airway, or openings of the unit.
12. Do not leave the car heater plugged in while starting vehicle or while vehicle's engine is off. Low voltage during these circumstances will increase heat in the wiring and may blow the fusible link in the power outlet or another fuse.
13. Check vehicle manual to ensure the 12V auxiliary power outlet is rated at 12.5 amps or greater. Do not use a socket extension to operate this car heater.
14. Only use the car heater in the cigarette lighter socket, do not use the car heater with other appliance connected via an adapter. Connecting multiple appliances to the cigarette lighter socket could cause the car fuse to blow.
15. Use the car heater with your engine running to avoid draining your battery.
16. Never leave engine running and/or heater on in an enclosed or poorly ventilated area.
17. To prevent personal injury or property damage, do not interact with the unit while driving.
18. Do not leave the car heater unattended. Unplug the car heater before leaving the vehicle.
19. To protect against electrical hazards, do not immerse cord, plug or unit in water or other liquid.
20. Keep this product dry.
21. Risk of Burns! Keep children and pets away from this unit while it is hot. Do not place hands or feet near the vent.
22. To prevent personal injury, do not attach this or any accessory on or near airbags.
23. Only use this car heater for up to 20 minutes at a time.
24. Inspect before every use; do not use if parts are loose or damaged. Do not use the car heater if power switch does not turn it on or off.
25. Maintenance should only be carried when car heater is switched off, unplugged from vehicle, and completely cool to touch.

KNOWING THE CAR HEATER:

1. Power Switch: Fan/Off/Heat+Fan
2. Base Mount
3. Retractable Handle
4. Inlet
5. Air and Heat Vent
6. Mounting Screws
7. Mounting Holes
8. 12V Plug and Power Cord (approximately 75 inches in length)
9. Adhesive Sticker

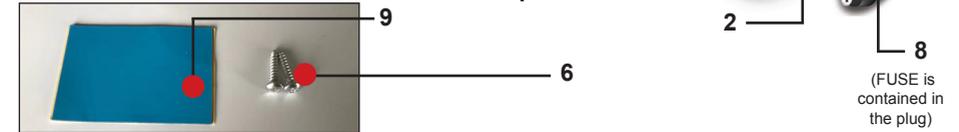

MOUNTING INSTRUCTIONS

The car heater base can be mounted to the vehicle using supplied adhesive sticker or mounting screws as desired.

MOUNTING WITH ADHESIVE STICKER

1. Make sure that the power cord is long enough to reach the 12V auxiliary power outlet from the mounting location. Be sure to avoid contact with any airbags or electrical controls for your vehicle.
2. Wipe surface clean and ensure it is grease-free, allow it to dry completely.
3. Place the adhesive sticker on the bottom of the base, press down and hold for one minute to adhere. Leave it for a few minutes before use.

MOUNTING WITH SCREWS

1. Make sure that the power cord is long enough to reach the 12V auxiliary power outlet from the mounting location. Be sure to avoid contact with any airbags or electrical controls for your vehicle.
 2. Use the mounting base as a guide to mark two holes in the mounting location.
- WARNING! TO PREVENT FIRE:** Verify that installation surface has no hidden wires or other components before drilling or driving screws. Carelessness may cause damage of the vehicle.
3. Drill pilot holes in the desired surface slightly smaller in diameter than the shaft of the mounting screws.
 4. Align the holes in the mounting base with the drilled holes.
 5. Secure the mounting base using mounting screws.

OPERATION:

Inspect the car heater is in good condition before use.

WARNING: To prevent blowing a fusible link on the power outlet,

only use with 12V auxiliary power outlet.

1. Place the power switch at its O (off) positions



2 The car heater can be gently adjusted into different positions by turning on the ball joint. If position requires changing, ensure heater is unplugged and has cooled to avoid injury.



3. Note: This car heater can burn out cigarette lighter sockets if used incorrectly. Always switch the engine on before inserting the 12V plug.

Put plug into a 12.5A rated 12V auxiliary power outlet ONLY.

4. Mount on dashboard or hold over windshield for spot defrosting. Use for up to 20 minutes, and then shut off for at least 5 minutes.

Do not use directly on a frozen windscreen.

5. The car heater can be removed from the mounting base. By holding the handle, the car heater can be moved around as needed.

To remove the heater from the base, place one hand on heater and one hand on base, sliding the heater towards the side of heat vent. Do not pull as this may damage the heater. Ensure heater is unplugged and has cooled to avoid injury. Open the handle by pulling the ring on the side of the handle.

After use, push the handle back and place the heater back onto the base. Ensure the heater is unplugged and has cooled to avoid injury.



6. To select either the **Fan** only or the **Heat** (heat and fan), press the power switch to the setting as marked. Turn the power switch to the centre **O** (off) position to turn off these functions.

WARNING! Do not operate longer than 20 minutes at one time, allow heater to cool completely after use.

7. Unplug the heater before leaving the vehicle.

MAINTENANCE :

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Ensure the power switch on the car heater is at O (off) position and pull the plug from socket. Allow it to cool completely before performing any inspection, maintenance, or cleaning procedures.

1. BEFORE EACH USE, inspect the general condition of the Heater. Check for:

- a. loose hardware
- b. misalignment or binding of moving parts
- c. cracked or broken parts.
- d. damaged electrical wiring
- e. any other condition that may affect its safe operation.