

Paint roller

INSTRUCTION MANUAL

Model No. 2890

Please read carefully before use and keep for future reference



Please read manual thoroughly before use

1. Only use acrylic or latex paints (no enamel or oil-based paints).
2. Always stir paint thoroughly before use.
3. If paint is too thick, mix in a little water as per manufacturer's instructions to achieve desired consistency.
4. For a quality finish, apply two coats.
5. Only apply the second coat when first coat is completely dry.
6. As with all DIY/Decorating activities, always make sure that you take the appropriate safety precautions.
7. If Edger Head is loose, it has not been pushed on to the handle firmly enough.

Preparing your flocked edger

1. Before first use, rinse the roller under a tap then dry.
2. Holding the tab, twist the cap anti clockwise and pull to remove.
3. Pour up to 330ml of paint into the Edger Head using the Easy Pour Jug (Fig. 7).
4. Replace the cap and twist to lock in place, push the tab back down.
5. Clean any excess off the Edger head, if required.
6. Filter paint through the Edger Head by rolling it on an old newspaper for 2 minutes or until fully covered with paint (Fig. 8).
7. The Edger Head is now ready for use.
8. When painting, ensure that the Edger head is tilted at an angle from the adjacent wall. The sponge portion should be seated fully on the painted wall (Fig. 9).

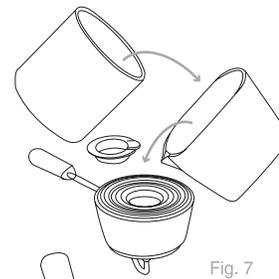


Fig. 7

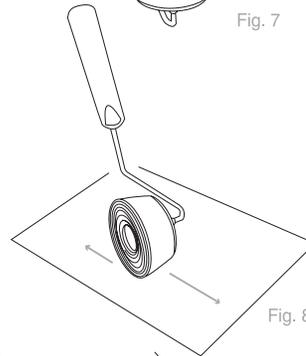


Fig. 8

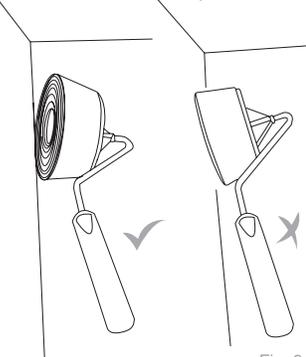


Fig. 9

Cleaning the Flocked Edger

1. Lift the Cap handle and twist anti-clockwise to open
2. Dispose of the excess paint responsibly.
3. Remove the Cap and Preventor Plate from the Edger Head and rinse with water until clean. Dry out for immediate use by rolling on newspaper or a cloth. Air-dry for later use.

Disposal

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of the appliance at the end of its life span according to environmental consideration

TECHNICAL SPECIFICATION

Material: PP and velvet

Measurement:

Paint roller: 19.5x20.2x9.0cm (velvet section: 16.5cm) - It can load maximum 800ml paint

Flocked edger: 29x9.5dia cm - It can load maximum 330ml paint

Corner pad: 20x7.5x4.5cm

Resting tray: 22x11x1.6cm

Easy Pour Jug: 20.5x9.1x15cm

Pole length: 67cm without roller / 90cm with roller

Easylife Ltd, London, NW1 0JP


Support Line: 0333 030 0777

© Easylife Ltd. 2021 (Reg. No. 05221840)

For more innovative products, please visit

www.easylife.co.uk

IN2890 © 2021 Easylife Ltd.

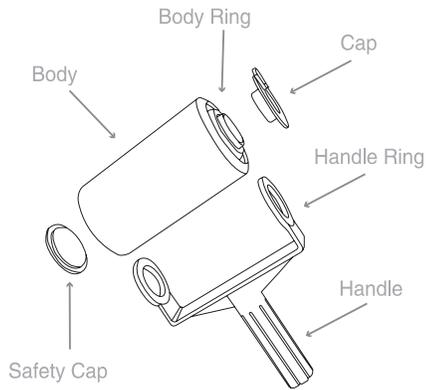

Preparing your Paint Roller for use

1. Before first use rinse the roller under a tap then dry.
2. Remove the Cap from Paint Roller
3. Pour up to 800ml of paint into the Paint Roller using the Easy Pour Jug (Fig. 1)
4. Replace the Cap and make sure it is thoroughly secure (it will click into place).
5. Now filter the paint through to the Paint Roller by running it over old newspaper for 2-3 minutes or until paint is visible all over the roller (Fig. 2)

Your Paint Roller is now ready for use

Using the Paint Roller

1. Make sure you are happy with the weight of the Paint Roller. If not, carefully remove the Cap and pour paint back into the can until the roller is a more comfortable weight.
2. For ceilings and high walls you can use a threaded pole or broom handle.
3. When working at height, always ensure you have a firm footing and both hands on the pole
4. When using a pole, always ensure you are directly under the weight of the Roller (Fig. 3)
5. Do not press too hard, let the Paint Roller do the work for you.

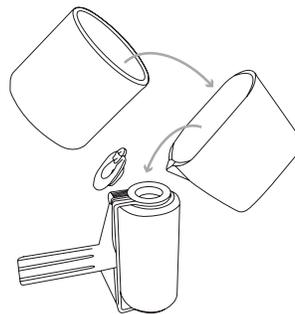
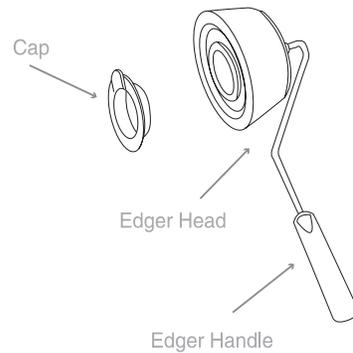


Fig. 1

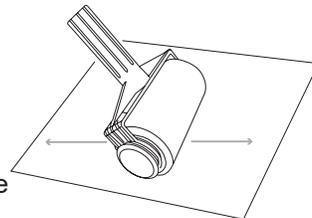


Fig. 2

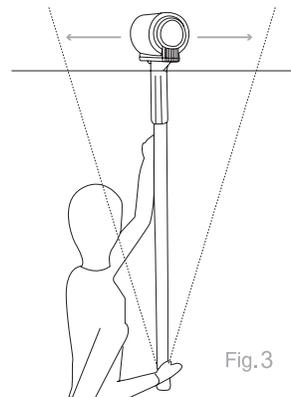


Fig. 3

During Intervals

If taking a short break, place on resting tray. If you are going to stop painting for more than 2 hours, wrap the roller tightly with plastic wrap and store in a cool dark place to prevent drying out.

Washing the Paint runner & changing the head

Remove the Cap from your Paint Roller and rinse with warm running water until clean. Dry out for immediate use by rolling on newspaper or a cloth. Air-dry for later use.

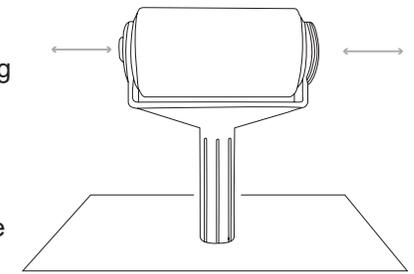


Fig. 4

To change the Paint Roller head, remove the Cap and Safety Cap. Prise the handle apart to release the head. Replace with a new head, replace the Safety Cap and Cap (Fig. 4).

Attach pole to the roller

1. Taper pole without thread to be firmly inserted into handle
2. Threaded pole to be used with Pole Adaptor (Fig. 5)

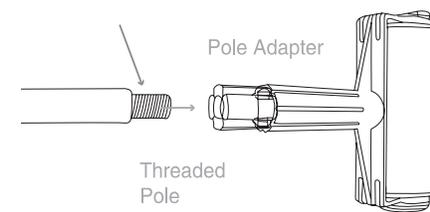


Fig. 5

