

## DISPOSAL

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of the appliance at the end of its life span according to environmental considerations.



## WARNING

This product is intended for domestic use only.

## TECHNICAL SPECIFICATION

Measurement:

Folded 19.6dia x 10Hcm

Unfolded: 19.6dia x 37 to 101cm

Material: ABS and Aluminium alloy

3 fan speeds settings:

- Low speed: more than 10 hours, working voltage: 5V, current: 0.37A
- Medium speed: more than 5 hours, working voltage: 7V, current: 0.75A
- High speed: more than 3 hours, working voltage: 9V, current: 1.28A

Power:

Rechargeable battery: Li-ion 3600mAh battery included

Input USB: DC 5V 1A

Type C USB charging cable included

Noise level: 30-40DB

# Rechargeable 2-In-1 Floor Fan & Table Fan

## INSTRUCTION MANUAL

Model No. 2957 (CY-101)

Please read carefully before use and keep for future reference

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed:

- This appliance can be used by children aged from 8 years and above and persons with physical, sensory or mental capabilities or lack of experience and knowledge only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.
- Do not let children play with or play around when fan is operating.
- The appliance must only be connected to a safety extra low voltage corresponding to the marking on the appliance.
- For household use Only. Not intended for commercial use.
- Before operating the product remove it from its packaging and check that it is in good condition
- DO NOT operate any product if damaged.
- Only use the USB cable supplied with this product.
- Before plugging into any power source, please check the rating voltage and power requirements as shown on the rating label for this appliance.
- DO NOT attempt to repair or adjust the cooler by yourself.
- DO NOT cover guard on the appliance when operating.
- Avoid touching any moving parts of the appliance.
- Never insert fingers, pencils or any other objects through the guard.
- DO NOT leave the operating appliance unattended for any extended period
- Place the unit on the stable and flat surface.
- DO NOT use in bathrooms
- This appliance is for indoor use only.
- Store in a dry area when not in use
- Do not clean the unit by spraying it or immersing it in water

EasyLife Ltd, London, NW1 0JP

**Support Line: 0333 030 0777**

© EasyLife Ltd. 2022 (Reg. No. 05221840)

For more innovative products, please visit

**www.easylife.co.uk**

## Dear Customer


Thank you for purchasing the Rechargeable 2-In-1 Floor Fan & Table Fan.

### WHAT'S IN THE PACK:

- Fan (folded)
- USB charging cable



### GETTING TO KNOW YOUR FAN

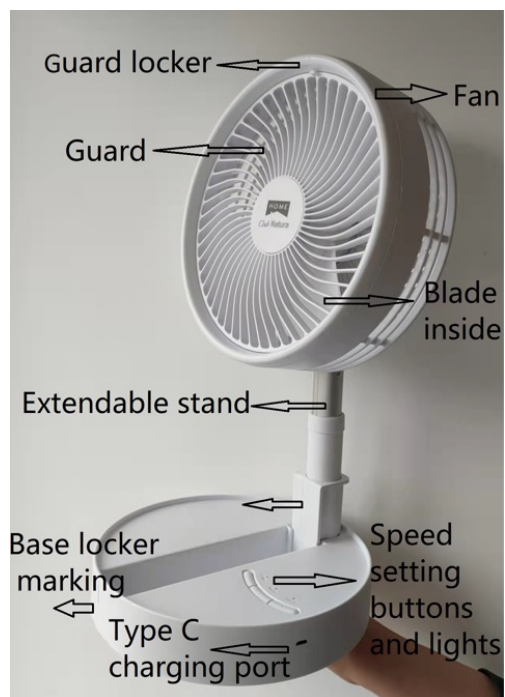

### HOW TO SET UP THE FAN BEFORE USING:

Before you unfold the fan, please ensure the guard is locked.

1 Check and ensure the guard is at locked position.

2 Unfold the fan by following photos below:

Please note: Only open from the side with the lock indicator on the base (opposite to the guard lock).

1. Pull the extendable stand into a straight position.
2. Turn the fan guard towards you.
3. Push the stand lock down into the face until hear a click.
4. Extendable stand can be adjusted to different heights by pulling the pole upwards. Use one hand to hold the bottom and the other hand pull the top to desired height. Push down from the top of the pole to adjust the stand to original height in order to fold back.



## HOW TO OPERATE THE FAN:

Before starting fan, ensure the guard is locked and fan is placed on a flat surface.

There are 3 speed settings: LOW/MED/HIGH

The fan can be turned on/off by pressing and holding LOW button for at least 3 seconds.




LOW setting: When the fan is turned on, it will automatically operate at low speed and correspondent indicator light will illuminate.



MED setting: Press MED button to change to medium speed.



HIGH setting: Press HIGH button to change to high speed.

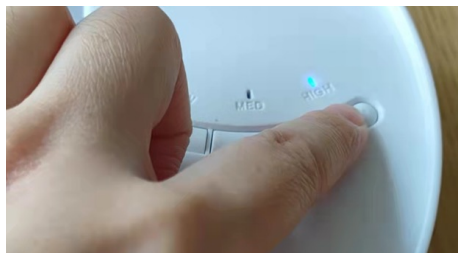

To turn it off, press and hold LOW button for more than 3 seconds.

## HOW TO RECHARGE:

Recharge the fan by using supplied USB cable.

Before recharging, check the instruction and rating label to ensure the power source is correct.

Plug the USB end of the cable into a USB port and the smaller end into the base of the fan.

The Speed setting lights will flash to indicate the unit is charging.

When fully charged, all 3 lights will stay on. Do not exceed 4 hours charging time. This can damage the fan.



## MAINTENANCE:

Before cleaning, ensure the fan is turned off.

Clean the fan with a damp cloth only.

Ensure it is completely dry before reuse.

Do not clean the fan with running water.

Do not immerse the fan in any liquid.

Do not use any chemical detergents to clean.

Ensure the fan is turned off.

Unlock the guard by following the arrow marking on the fan.

Once it is unlocked, remove the guard.

Clean the guard and blade with a soft dry cloth.

Once cleaning is complete, put the guard back on and lock it by following the arrow marking on the fan.

