

Lightweight Adjustable Puzzle Organiser


INSTRUCTION MANUAL

Model No. 3330

Please read carefully before use and keep for future reference


How to Use

1. Using the red strap at the top, gently lift the board upwards.
2. Place the leg located on the middle of the board into one of the four slots.
3. Ensure leg is inserted fully and board is stable before use
4. When not in use, remove leg from slot and supporting the board, gently lower until flat.
5. Store unused jigsaw pieces in the drawers by gently pulling the drawers in and out. Do not force drawers.

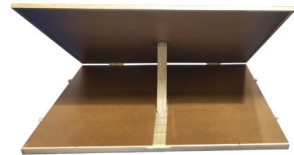

Safety Information

- Take care when moving around
- Take care that hands/fingers are out of the way when closing the board.
- The drawers are not attached, be careful not to extend fully to avoid spilling puzzle pieces
- Use on a flat surface to avoid risk of the item falling
- Keep away from sources of fire. i.e. fireplace or stove
- Keep away from sources of water

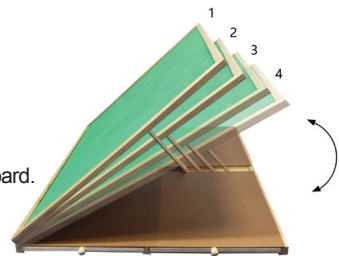

DISPOSAL

- Please respect the environment.
- Dispose of the packaging according to the local recycling regulations.
- Dispose of the appliance at the end of its life span according to environmental considerations.

TECHNICAL SPECIFICATION

Measurement: L89xW66xH4.5cm

Inner Surface Measurement: L84.5xW61.5cm

Drawer Surface: L39.5xW26.5cm

Materials: Paulownia wood, MDF, Rubber wood and Felt

To Clean: Wipe over with a damp cloth

EasyLife Ltd, London, NW1 0JP

Support Line: 0333 030 0777

© EasyLife Ltd. 2024 (Reg. No. 05221840)

For more innovative products, please visit

www.easylife.co.uk