

# Dancing Flame Lantern

## INSTRUCTION MANUAL

Model No. EL3374

Please read carefully before use and keep for future reference

---

### Warning:

- Do not look directly at the light
- Switch the lamp off before inserting batteries.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. All batteries should be identical.
- To avoid explosion or leakage do not dispose of batteries in fire or attempt to recharge a standard or alkaline battery.
- Be sure to insert batteries with the correct polarities and always follow the batteries manufacturer's instructions.
- Remove batteries and store them in a cool and dry place when not in use, or if the torch is not used for long periods.
- Always remove old and dead batteries from the product.

### Please note:

- Keep away from water. Do not use in bathrooms, laundry areas or where any water is present.
- Keep away from flammable materials such as curtains, mats, rugs, draperies, shelves, loose wall paper, etc.
- Keep away from flammable liquids such as petrol or paint.

### Disposal:

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of the appliance at the end of its life span according to environmental consideration

#### TECHNICAL SPECIFICATION

Measurement: 16W x 13.5D x 26H cm


LED: 6 LEDs

Battery: 3 x AA batteries (no included)


## INSTRUCTIONS FOR USE:

The battery compartment is located at the bottom of the lamp.

Remove the battery cover. Insert 3xAA batteries (not included) into the battery compartment, observing correct polarity.

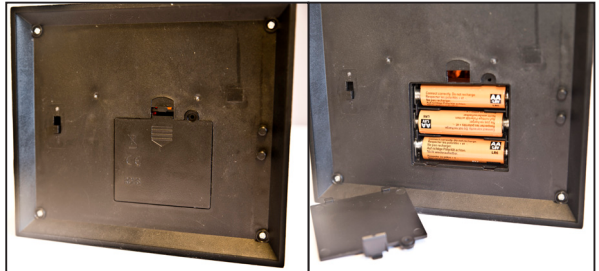

Push on/off switch to ON position

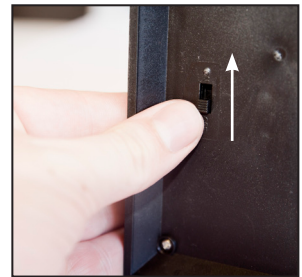

Place the lamp on a flat and stable surface

