

Golden Silk Facial Hair Remover

INSTRUCTION MANUAL

Model No. EL5132

Please read carefully before use and keep for future reference

How to use

1. Remove cap (image 1)
2. Install battery: Grab the upper section of the unit with one hand, the bottom half with the other, and pull apart (image 2). Insert the battery, observing the correct polarity.
3. Turn unit on: Just slide gold switch upward (image 3)
4. To get the best shave, you will have to move the shaver across your face in slow, rotating movements – **The head will not rotate.**



NOTE: It is normal for the head to become warm with use

Cleaning (be sure unit is off):

- Twist the rotating hair removal head counter-clockwise and lift off (image 4)
- After each use, clean the head by using a brush (included) to wipe away the hair residue
- Empty any hair from the body of the hair remover unit by turning it over and gently tapping the sides
- To put the hair removal head back on the unit, line up the 'groove' indicators on the cap with those on the unit and twist clockwise.

Tips & Pointers:

- For superior results, use on hair 1/4in length or less
- If the unit begins to slow down, clear the hair removal head and body of any hair residue. If the unit is still running slow, change the battery
- Gentle enough to use every day

NOTE: Prior to first use, test the hair remover on a small area. If any sensitivity or allergic reactions occur, discontinue use immediately. Do not use your hair remover on sensitive or irritated skin.

Imported and distributed by Easylife Group Ltd, London NW1 0JP

Support Line: 0333 030 0777

For more innovative products from Easylife please visit:

www.easylifegroup.com

INS132 © 2019 Easylife Group Ltd

 **easylife**[™]
Est. 1992 everyday solutions

DISPOSAL

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of the appliance at the end of its life span according to environmental consideration.



WARNING

- Keep out of reach of children.
- Do not use around a bath
- Do not use on irritated skin. Discontinue use if skin irritation occurs.
- Exercise caution when using around eyes.
- Do not rinse trimmer head under water.
- Do not submerge unit under water.
- Store in a cool dry place when not in use.
- Do not connect battery improperly, charge or dispose of in fire. Battery may explode or leak.
- Dispose of old batteries according to all applicable local regulations.

Technical Specification

Power: 1xAA battery (not included)

Measurements: 10.8x2.3x2.2cm

Troubleshooting

<u>Problem</u>	<u>Resolution</u>
The head is not rotating	The head does not rotate. You have to rotate the Hair Remover against your skin
Once turned on, light comes on but nothing happens	The head can become loose during transit, remove the head and re-attach
	Ensure catching area is free of hair. Once the catching area is full it will stop working until emptied
Nothing happens when I turn it on	Change the battery

Imported and distributed by Easylife Group Ltd, London NW1 0JP

Support Line: 0333 030 0777

For more innovative products from Easylife please visit:

www.easylifegroup.com

IN5132 © 2019 Easylife Group Ltd

