

## CARE & MAINTENANCE

### WARNING

- Before beginning any maintenance, unplug your device and allow to cool completely
- To clean, unplug your power tower from wall socket. Unplug all the devices on the power tower. Allow to cool completely. Wipe the exterior with a damp cloth only.
- Do not use alcohol, petrol, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage to the casing of the power tower.
- Do not spray any chemical cleaners onto or into unit
- Do not immerse it in water.
- Wait until the unit is completely dry before use.

### DISPOSAL

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of the appliance at the end of its life span according to environmental consideration

### TECHNICAL SPECIFICATION

Dimensions: Dia15 x H16cm  
Voltage: 240V AC  
Current Frequency: 50Hz  
Rated Current: 13A  
Maximum Power: 3120W  
USB output Current: 2.4A  
USB output Voltage: 5V  
Length of Cable: 2M

Imported and distributed by EasyLife Group Ltd, London NW1 0JP

**Support Line: 0333 030 0777**

For more innovative products from EasyLife please visit:

**[www.easylifegroup.com](http://www.easylifegroup.com)**



# Power Tower 9 INSTRUCTION MANUAL



Model No. EL5905

Please read carefully before use and keep for future reference



### Dear Customer,

Now you can run a whole variety of mains-powered appliances as well as charge battery-operated devices from a single mains outlet with the Power Tower 9

But unlike ordinary power strips, these towers have a minimal footprint, so they take up very little space on your desk or worktop.

Sturdy and stable, they feature overload protection and carry handle on the top. Safely manufactured from fire-resistant materials it stands H16cm (7 sockets & 2 USB ports) with 2m cable.

### WARNINGS AND SAFETY INSTRUCTIONS:

When using electrical appliances, basic safety precautions should always be followed:

- Read all instructions before use.
- For domestic indoor use only.
- Do not use outdoors or for commercial use.
- Before use, ensure there is no damage to the product. If any damage is visible do not use and contact customer services
- Take care not to drop the appliance as heavy impacts may cause internal damage.
- Before connecting the appliance, check if the voltage indicated on the bottom of the appliance is in accordance with the mains voltage in your home.
- Check that no damage has occurred to the appliance and power cable before each use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- The use of any accessory attachments not recommended by seller may cause injuries and invalidate any warranty you may have.
- Do not allow the product to hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near heat sources.
- Use on a level, stable surface.
- Do not cover the item in any way when in use as this may cause overheating.
- Do not use this appliance for any other use than the intended use it is designed for.
- Do not touch the product with wet hands
- Ensure there is sufficient distance between this appliance and other items on the work surface or work station, or sufficient distance between the appliance and the confines of the area in which it is situated. We recommend a minimum clearance around all faces of at least 10cm.
- Do not immerse power cable, plug or appliance, in water or any other liquid.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged power cable or plug or after the appliance malfunctions or has been damaged in any manner. Do not allow the power cable to become kinked or stored in a twisted manner and recommend that you regularly check its condition.
- Any repairs must be conducted by a qualified electrician or electrical service agent.

### HOW TO USE

- Place power tower on a flat surface.
- Before plugging into any power source, ensure the ratings label voltage corresponds to your wall plug voltage.
- Plug power tower into wall socket.
- Do not connect heaters to extension cords, multi-sockets or adaptors.
- Plug devices into the main sockets or 2 USB ports.
- Ensure that you do not overload the power tower. Please refer to the technical specification for maximum power usage. If you overload, the power tower will cut out. See reset instruction below.
- When changing location ensure nothing is plugged into the power tower.



### RESET

1. Unplug from wall socket.
2. Allow to cool for minimum 10 minutes.
3. Remove excess devices.
4. Press reset button (black button) at the side of the base.
5. Plug back into the wall socket.

