

# GOHEATERLED

## INSTRUCTION MANUAL



Model No. 6000 (Model: KLV-031A-R-UK500)

Please read carefully before use and keep for future reference

**Support Line: 0333 030 0777**

For more innovative products from EasyLife please visit:

**www.easylife.co.uk**

IN6000 ©2022 EasyLife Ltd

### IMPORTANT SAFETY INSTRUCTIONS

**Read instruction carefully before using the heater.**

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.

**This product is only suitable for well insulated spaces or occasional use**

#### WARNING:

- Do not cover
- The heater must not be located immediately below a socket-outlet
- Children are to be supervised to ensure they do not play with the heater.
- Cleaning and user maintenance shall not be made by children.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Children of less than 3 years should be kept away from the heater.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

#### CAUTION:

Some parts of this product can become very hot and cause burns. Keep away from all children and vulnerable people.

#### WARNING:

- For indoor use only. Do not use outdoors.
- Before plugging into any power source, ensure the ratings label voltage corresponds to your wall plug voltage.
- Do not connect the heater to extension cords, multi-sockets or adaptors.

- Only plug it into wall socket directly and ensure it is in a vertical position, otherwise its tilt safety will deactivate the heater.
- Do not operate the heater if the plug is damaged or after it malfunctions, has been dropped, or damaged in any manner.
- Do not attempt to repair the heater yourself. Contact customer services for assistance.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- To allow for maximum heat, air, and ventilation flow, allow at least one metre of unobstructed space to the front and sides. Also allow 20cm of space from the bottom.
- Keep away from flammable materials such as curtains, mats, rugs, draperies, shelves, loose wall paper, etc.
- Keep away from flammable liquids such as petrol or paint
- Do not insert or allow foreign objects to enter or block any ventilation or exhaust openings as this may cause electric shock, fire or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner.
- Never leave the heater operating when sleeping.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- To disconnect the heater, switch off the power button and allow to cool. Once cool enough to touch remove from power outlet.
- Always unplug heater when not in use.

### CARE & MAINTENANCE


**WARNING: DO NOT perform any maintenance on the heater. Contact customer services for advice.**

To clean; unplug your heater and allow to cool completely. Wipe the exterior with a non-abrasive, damp cloth. Use a mild soap if needed. Dry with a soft cloth.


- Do not use alcohol, petrol, abrasive powders, furniture polish, or rough brushes to clean the heater.
- Do not spray any chemical cleaners onto or into the heater
- Do not immerse heater in water.
- Wait until the heater is completely dry before use.

Model: KLV-031A-R-UK500					
Item	Symbol	Value	Unit	Item	Unit
<b>Heat Output</b>			<b>Type of heat input, for electric storage local space heaters only (select one)</b>		
Nominal heat output	Pnom	0.5	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	Pmin	0.47	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	Pmax,c	0.5	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
<b>Auxiliary electricity consumption</b>				fan assisted heat output	No
At nominal heat output	elmax	N/A	kW	<b>Type of heat output/room temperature control (select one)</b>	
At minimum heat output	elmin	N/A	kW	Single stage heat output and no room temperature control	No
In standby mode	elSB	0.0005	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
				with electronic room temperature control	Yes
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	No
				<b>Other control options (multiple selections possible)</b>	
				room temperature control, with presence detection	No
				room temperature control, withopen window detection	No
				with distance control option	No
				with adaptive start control	No
				with working time limitation	Yes
				with black bulb sensor	No
Contact details	Refer to Applicant Name / Address				

## HEATER OVERVIEW (Heater only works vertically)

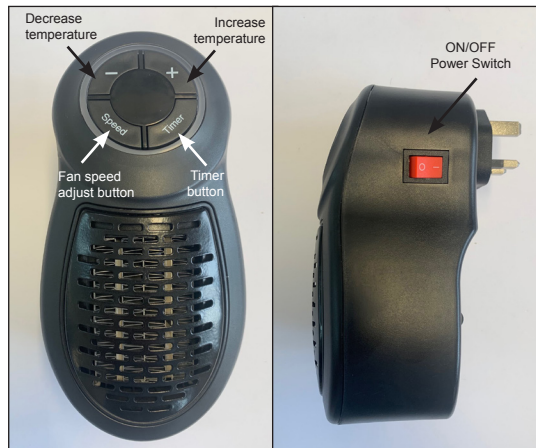

## REMOTE CONTROL

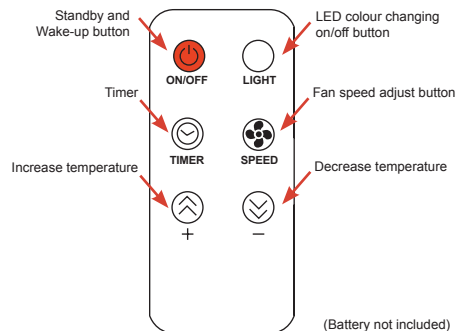

## HOW TO OPERATE THE HEATER USING THE CONTROL PANEL

- Getting started.** Plug the heater vertically into a wall power socket (220-240V). Press the power switch on the side to the ON position.
- Select the desired temperature.** When the heater is turned on, the display screen will show “20”, this is the default temperature. Press “+” to increase the temperature and “-” to decrease the temperature. The temperature can be set between 15°C and 32°C
- Set the fan speed.** Press the Speed button to select “HH” (High speed) or “LL” (Low speed). The display screen shows “HH” or “LL”.
- Set the Timer.** Press the Timer button until the display screen shows one number between 1 and 12. Repeatedly press Timer Button to set required hours.

## HOW TO ACTIVATE OR DEACTIVATE THE LED COLOUR CHANGING LIGHT FEATURE

- Turn on the heater.
- Simultaneously press and hold “-” and “+” buttons for 3 seconds until the light activates.
- Every few seconds the light will cycle through 7 colours.
- Please note the colour change cycle is automatic and can not be altered.
- Press and hold “-” and “+” buttons for minimum 3 seconds to switch off the colour changing light feature.
- When the heater is turned off the colour changing LEDs will turn off automatically.


### Please note:

- While reaching the desired temperature you will hear a “fan noise”. Once temperature has been reached the heater will go quiet. It is still working.
- The heater has an automatic 12 hour auto-stop feature.

## HOW TO OPERATE THE HEATER VIA REMOTE CONTROL

### 1. Installing the battery

(not included)  
Press release catch inwards and pull battery compartment out. Insert 1x CR2025 battery (not included) into the battery compartment, observing correct polarity. Hold the battery down as you slide the cover back on.

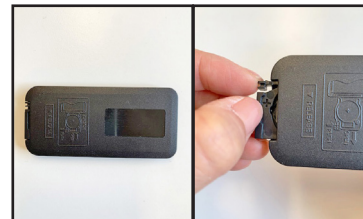

- Select the desired temperature.** When the heater is turned on, the display screen will show “20”, this is the default temperature. Press “+” to increase the temperature and “-” to decrease the temperature.
- Fan speed adjustment.** Press “Speed” button to switch between “HH” (High speed) of “LL” (Low speed).
- Set the Timer.** Repeatedly press “Timer” button to select number of hours before the heater turns off.
- Colour changing LED light.** Press “Light” button to switch on the colour changing light feature. Press again to turn off.
- Standby and Wake-up.** Press the ON/OFF button to put the heater into standby mode. The digital screen will turn off and no more heat will be generated. However, the fan will continue to run for 60 seconds. To Wake-up, simply press the ON/OFF button again.
- Turning the heater off.** Only the power switch on the side of the heater can turn the heater off completely.



## COLOUR CHANGING LIGHT FEATURE

ON – press “-” and “+” together for 3 seconds  
OFF - press “-” and “+” together for 3 seconds  
Or use the remote control

## DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product’s lifespan please dispose of it at an authorised household WEEE waste recycling centre.

## TECHNICAL SPECIFICATION

Power: 220-240V AC  
Power Frequency: 50/60Hz  
Wattage: 500W  
Measurements  
Heater: H17.9xW9.1xD9.1cm  
Remote: L8.5xW4cm  
Remote Control Battery: 1x CR2025 (not included)

