

DISPOSAL

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of paper and cardboard packaging separately from plastic bags into the corresponding containers.
- Dispose of the appliance at the end of its life span according to environmental considerations.

Technical Specification:

Model No.: SS25

Measurement:

Single 190x90cm

Dbl/King – 190x140cm

Cable length: 2.3M

Blanket material: 100% Polyester

Single 190*90cm Rated Input: 230V ~ 50/60Hz 70W

Dbl/King 190*140cm Rated Input: 230V ~ 50/60Hz 2*58W

Temperature range: 30-55°C +/-5°C

210 mm

Easylife Ltd, London, NW1 0JP
Support Line: 0333 030 0777

© Easylife Ltd. 2024 (Reg. No. 05221840)

For more innovative products, please visit
www.easylife.co.uk

IN7605/7606©2024 Easylife Ltd.



封底

148 mm



Intelligent Multi Zone Electric Blanket INSTRUCTION MANUAL



Model No.: 7605 Single 190x90cm/ 7606 Dbl/King – 190x140cm

Please read carefully before use and keep for future reference

Support Line: 0333 030 0777

www.easylife.co.uk

封面

A5尺寸, 128G铜版纸, 骑马订

Dear Customer

Thank you for purchasing the Intelligent Multi Zone Electric Blanket.

Note: Intelligent Multi Zone Electric Blanket can only be used as electric under blanket.

IMPORTANT SAFETY INSTRUCTIONS – RETAIN FOR FUTURE USE

Please read carefully before use

Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, return it to the supplier prior to any further use.

When using this under blanket, to reduce the risk of fire, electric shock and/or injury to persons, basic safety precautions should always be followed.

Safety instructions:

1. When the electric under blanket is folded, crumpled or used abnormally the electric under blanket can overheat which will activate the permanent protection function.

2. Use only as an under blanket.

Warnings and cautions

To prevent damage or malfunction, users must follow below points while using the product.

1. Do not use folded. (Fig.1)



2. Do not roll and drape the appliance while being used. (Fig.2)

3. Do not insert or use pins on the appliance. Do not attempt to secure the electric under blanket with pins or other metal objects. Do not scratch with sharp devices or beat the electric under blanket with blunt devices. (Fig.3)

4. Use the electric under blanket as under blanket only. Never use the under blanket as an under blanket. (Fig.4)

5. To avoid scalding of the body, do not use with a helpless person, a person sensitive to heat or other very vulnerable persons who are unable to react to overheating. (Fig.5)

6. Do not turn on the electric under blanket when there is any folded bedding or heavy objects on it, as it will cause the electric under blanket to overheat. (Fig.6)

7. Do not expose the electric under blanket to direct sunlight. Do not iron the electric under blanket. Avoid any damage to the insulation of the heating wires. (Fig.7)



8. Do not use together with any other heating appliances (such as foot warmer, hot-water bottle). (Fig.8)



Note: Intelligent Multi Zone Electric Blanket can only be used as electric under blanket.

9. Do not use with anything that can start a fire on the bed such as cigarettes, sparks etc, which can lead to fire. (Fig.9)

10. Switch off the electric under blanket power or pull out the electric under blanket plug from power socket when you are going out. Do not leave electric under blanket unattended. (Fig.10)

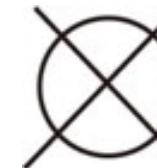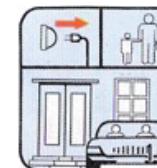

11. Do not dry clean. (Fig.11)

12. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children. Children of less than 3 years should be kept away.

Children from 3 years and less than 8 years should only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years should not plug in, regulate, and clean the appliance or perform user maintenance.

The above warning is directed by the safety standards, but we recommend for use by adult only.

13. This appliance is classed as Electrical or Electronic Equipment so please ensure that at the end of the life of this appliance it is disposed of in the correct manner in accordance with local authority requirements. It must NOT be disposed of with household waste.

14. Before using, check the electric under blanket for damage. Do not use the electric under blanket if any damage is found on the product. If the mains supply cord is damaged a replacement with the controller MUST be obtained from the manufacturer.

15. Do not attempt to perform any repairs on the electric under blanket yourself.

16. Do not unplug the power plug by pulling on the power cord and do not move the appliance by pulling on the soft power cord.

17. Only use together with the supplied controller -**Model SS25. Do not use another controller**

18. The product is not intended for medical use in hospitals.

19. To protect against electric shock, do not immerse any part of the electric under blanket in water or other liquid whilst switched on. Do not leave drinks in the area or drink liquids whilst in use. Do not use if wet.

20. When not in use, the electric under blanket should be stored in a dry place. When storing the appliance, allow it to cool down before folding. Do not crease the appliance by placing items on top of it during storage. After storing, the blanket should be carefully checked before use to make sure the controller and cords are safe.

21. Do not use the electric under blanket on a adjustable bed.

22. It is recommended to unplug the electric under blanket from the mains socket when not in use.

Note: Intelligent Multi Zone Electric Blanket can only be used as electric under blanket. Please follow the instruction and warnings for safe use the product.



machine wash under 30°C

DO NOT DRY CLEAN, DO NOT WRING, DO NOT SPIN DRY

Ensure all controllers are unplugged from the power point and from the electric under blanket before cleaning.

Ensure the controller/s and plugs do not get wet.

Ensure the electric under blanket completely cools down before washing.



Read Instructions



Do not folded or rucked



Do not insert pins

Do not use if wet.

Do not use with a helpless person, an infant, or a person insensitive to heat.

Overlong application at high setting can result in skin burns.

Only use together with the supplied controller --**Model SS25**

What is in the pack:

Mains lead with controller connected to Intelligent Multi Zone Electric Blanket



Operation:

7605 Single 190x90cm has 1 x Controller

7606 Dbl/King 190x140cm has 2 x Controllers.


One is on the left and the other is on the right.



6 Heat Settings:

Upper/Body zone: 30-35-40-45-50-55 $\pm 5^\circ\text{C}$

Lower/Feet zone: 30-35-40-45-50-55 $\pm 5^\circ\text{C}$

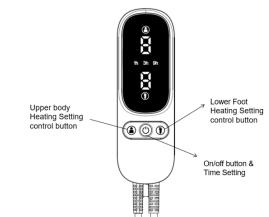

3 Time Settings: 1h-3h-9h (The electric under blanket will shut-off automatically after each setting. Switch the power back on and select desired setting again by following the instructions.)



Do not plug into mains power socket until you have checked the controller and blanket are correctly connected. Put power plug into an AC 220V - 240V ~, 50/60Hz wall socket. NOTE: The power plug **MUST** be inserted directly into the wall power socket.

When plug in, all the LED display is fully on for 1 second for self-test, and then off, the appliance does not heat up, enter the standby mode.

Press and hold the on/off button “” to turn on the blanket, and the blanket is now in default mode. The default mode is to heat the upper and lower body at Heat Setting 3 (40 degree) for 1 hour. In the meantime, the LCD screen will display both upper and lower setting is 3. The timer 1h icon is lit. The electric blanket will start heating up in a few minutes.

To change the heat setting, short press button “”(upper body) or “”(lower feet) to adjust the temperature of upper body section and feet section, and the temperature starts cycling from 3-4-5-6-5-4-3-2-1-0-1-2-3-4-5-6, it has 6 heat settings in total.

To adjust the time settings, short press the on/off button “”, the timer is cycled regularly by 1h-3h-9h-1h, and the timer is displayed as a countdown.

To turn off the blanket, long press the on/off button “”, and the screen turns blank to stop working.

Support Line: 0333 030 0777
www.easylife.co.uk

Care Instruction:

Before cleaning the electric under blanket, ensure it is unplugged from mains and allow it cool down completely.

Ensure controller is removed from electric blanket.

To remove the controller, gently pull the controller plug directly out. Do Not Pull the controller cable.

Once the electric under blanket is cleaned and completely dry, to fit the controller plug, simply hold the socket with one hand and push the controller plug all the way into the socket.



DO NOT DRY CLEAN, DO NOT WRING, DO NOT SPIN DRY

Ensure all controllers and plugs are unplugged from the power point and from the electric under blanket before cleaning.

Ensure the controllers and plugs do not get wet.

Ensure the electric under blanket completely cool down before washing.

Treatment For Localised Soiling

Never Use Hot Water.

The area affected should be sponged gently using a natural wool detergent or mild soap flakes dissolved in warm water (30°C Max), followed by two consecutive sponging's using clean, soap-free warm water.

- Lightly compress the treated area between two towels to absorb excess water.

Do Not Wring or Spin Dry.

- Refer to the section "Drying" for drying instructions.
- The connections to the blanket must be kept free of moisture.

Hand Washing

Never Use Hot Water.

- Place the Blanket in warm (30°C Max) water (bathtub or large laundry tub is ideal) mixed with either a natural wool detergent or with mild soap flakes.
- Soak the blanket for approximately five minutes, and then gently squeeze the soapy water through.
- Rinse the blanket thoroughly with clean warm water until no more suds are visible and allow water to drain off.
- Refer to the section "Drying" for drying instructions

With normal use it is recommended that you hand wash your blanket once a year.

Do Not Wring or Spin Dry the Blanket.

Machine Washing

- Place the Blanket in the washing machine with either a natural wool detergent or with mild soap flakes.
- Set your machine to the Delicate Wool or Gentle cycle (**without Spin Dry**) and set the water temperature to warm (30°C Max). **Do Not Wash With HOT Water.**
- When the cycle has finished, allow water to drain off.
- Refer to the section "Drying" for drying instructions

With normal use it is recommended that your machine wash your blanket once a year.

Do Not Wring the Blanket. Do Not Spin Dry.

Drying

- Spread the blanket out on a clean surface (e.g. a large table) to dry in a shady area.
- Your blanket can also be dried on a clothesline provided the blanket is not creased or folded.
- Ensure pegs are not used on the element areas of the blanket if hanging on the line.

Note: The blanket must be thoroughly dried including controller sockets.

- With normal use it is recommended you wash your blanket once a year

Do Not Wring the Blanket. Do Not Spin Dry.

Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, return it to the supplier prior to any further use.