

Product specification:

Light source: 1 x 3W UV-C lamp and U shape  
UV Wavelength: UV-C (253.7nm)  
Measurement:  
Open: 24.1x 3.5 x 2.5cm  
Close: 12.5x3.5 x 2.5cm  
Product weight: 65g (without batteries)  
Operate:  
Input: DV 5V  
4 x AAA batteries (not included) or USB charging cable  
Full power last for max 3 hours

DISPOSAL:

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of the appliance at the end of its life span according to environmental considerations.



Imported and distributed by Easylife, London NW1 0JP

Support Line: 0333 030 0777

For more innovative products from Easylife please visit:

www.easylife.co.uk

EL2335 ©2020 Easylife



Foldable Sterilization Wand  
INSTRUCTION MANUAL

Model NO. EL2335


Please read carefully before use and keep for future reference

WARNING

Never look directly at the UV-C bulbs.  
Do not expose eyes or skin directly to UV light, as it is harmful to skin and eyes.  
Always keep this device out of the reach of children.  
Do not expose UV light to human or animals.  
Do not break the UV bulbs.  
Do not place the wand near a heat source or expose it to direct flame or heat.  
Do not immerse it in water, such exposure may damage the unit and lead to fire, electrical shock, explosion or serious injury.

Please read instructions carefully before using this product.

Knowing the product:

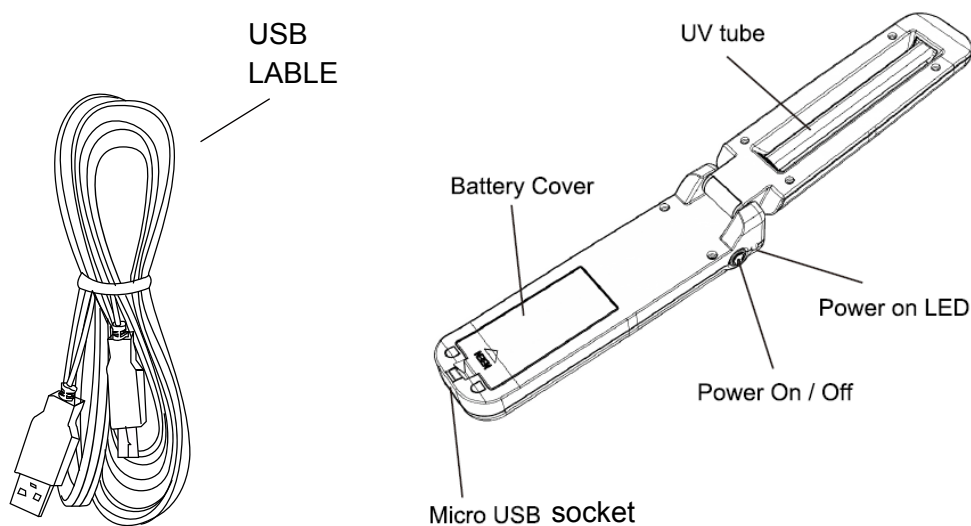

Operatizing:

Never look directly at the UV bulbs.  
Do not expose eyes or skin directly to UV-C light.  
Always keep this device out of the reach of children.

- Inserting Batteries  
Unfold the Sterilization Wand  
Open the battery cover. Insert 4 x AAA batteries (not included) into the battery compartment and close the cover. The Foldable Sterilization Wand is now ready to use.
- Using via USB cable  
Unfold Sterilization Wand  
Plug USB cable (included) into Micros USB socket on the device and foldable Sterilization Wand is now ready to use.  
Make sure the USB cable is connecting to the device properly while using.
- Turning On and Off  
Never look directly at the UV bulbs.  
Do not expose eyes or skin directly to UV-C light.  
Always keep this device out of the reach of children.  
To turn the device on, press and hold the Power button for at least 3 second.  
Power on LED indicator will light up.  
Press power button again to turn it off

Safety feature:

foldable Sterilization Wand safety switch which protects users from accidental direct contact with the UV-C light. When the UV-C lamp is turned to the upright position (bulb facing up) the switch will automatically cut off the UV-C light. When the UV-C lamp is pointing downwards, it will resume lighting.

Sterilizing:

Never look directly at the UV bulbs.  
Do not expose eyes or skin directly to UV-C light.  
Always keep this device out of the reach of children.

This Sterilization Wand eliminates 99.9% of bacteria, viruses, mould and dust mites in seconds. Which make it ideal for sanitising and disinfecting kitchens,bathrooms,bedrooms,children’s rooms,door handles,TV remotes, light switches, keyboards, etc. It’s pocket-sized and easy to use. Ideal for the home, office and travelling

Hold the device approximately 1-2 inches from the surface and gradually move the wand over the entire area. Allow the light to stay on each area for 20 seconds to ensure optimum exposure.

Turn off the UV light by press the on/off power button after using.

Fold it back to its original size for storage and only store it in cool and dry place.

If the device won’t be used for a while, after turning the device off please remove the batteries before storing it.